

SIDE SKIRT INSTALLATION GUIDE

Key steps with visual references and English instructions

VX SPEED DESIGN

PREPARATION

Steps 1 - 2




1 Inspect Both Side Skirts

Unpack both side skirt extensions. Inspect the finish, edges, brackets, and mounting holes for shipping damage before installation.

INSTALLATION NOTE

Keep the protective film on finished surfaces until the final fit is confirmed.

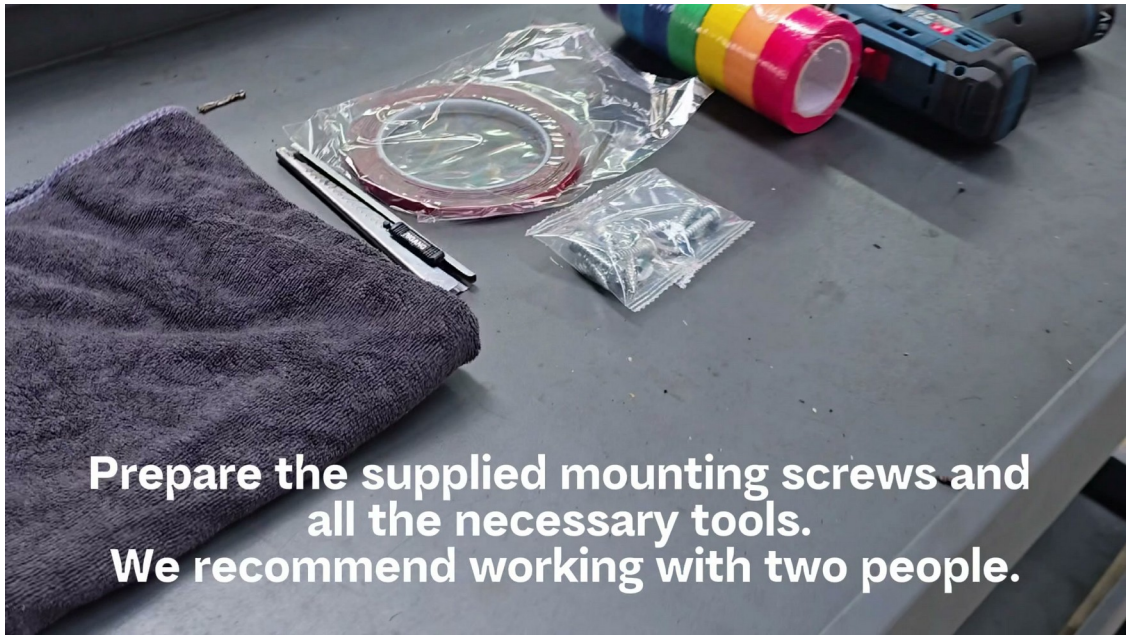

2 Prepare Hardware and Tools

Check that the supplied bolts, washers, mounting screws, and double-sided tape are complete. Prepare a clean cloth, spray bottle, suitable drill, and hand tools.

INSTALLATION NOTE

The video recommends two installers so the long side skirt can stay level.

SURFACE PREP AND TEST FIT

Steps 3 - 4




3 Clean the Mounting Surface

Spray and wipe the lower vehicle sill. Remove dust, grease, and residue, then dry the surface completely so the tape can bond properly.

INSTALLATION NOTE

The mounting surface must be completely dry before applying tape.

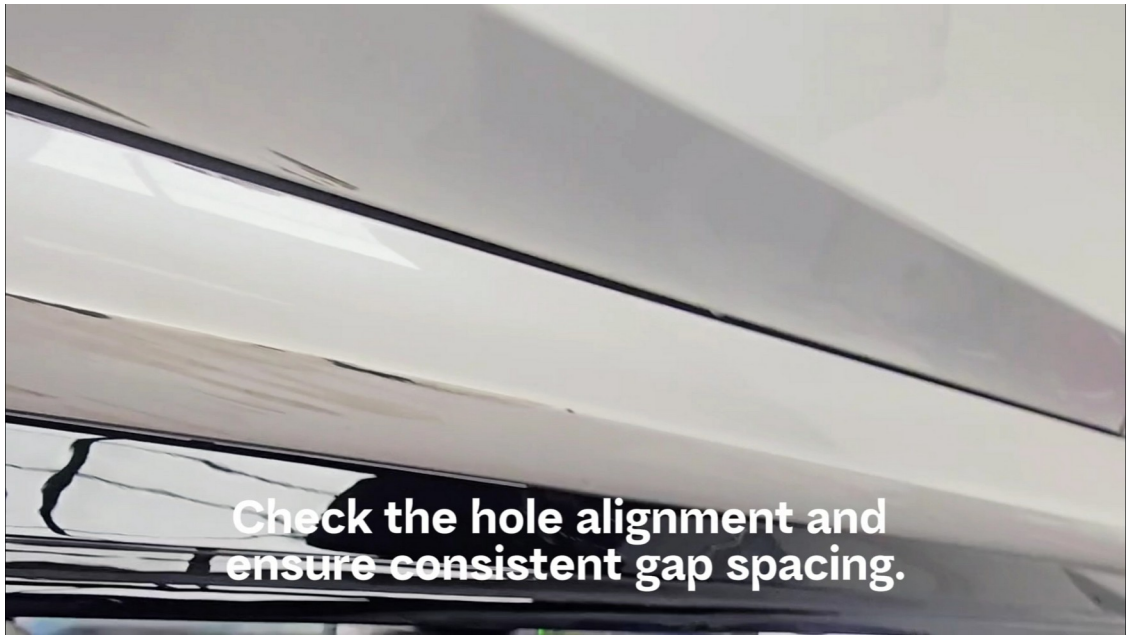

4 Dry-Fit and Check Gaps

Hold the extension against the lower sill. Confirm its orientation, hole alignment, end position, and even gap spacing before drilling.

INSTALLATION NOTE

Do not force the part into position. Recheck orientation if the contour does not fit.

HOLE PREPARATION AND TAPE

Steps 5 - 6



5 Drill the Side Skirt Holes

Use the vehicle mounting points as a reference and drill the corresponding holes in the side skirt extension. Keep the drill square to the part.

INSTALLATION NOTE

Drill only the side skirt where shown. Avoid wiring, brake lines, and factory jacking points.



6 Apply Double-Sided Tape


Apply the supplied automotive double-sided tape along the designated contact areas. Press firmly and keep the tape smooth around bends.

INSTALLATION NOTE

The tape supports positioning. Mechanical fasteners provide the primary retention.

POSITIONING AND INITIAL FASTENING

Steps 7 - 8

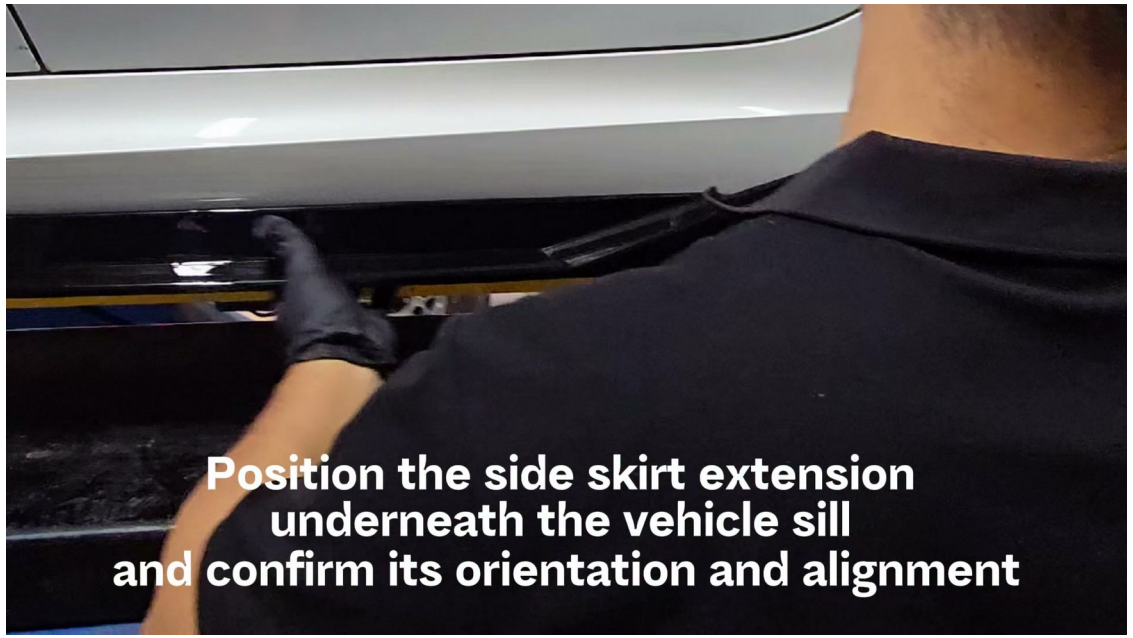

7 Position and Align the Side Skirt

Lift the extension under the vehicle sill. Confirm the orientation and keep both ends level while aligning every mounting hole.

INSTALLATION NOTE

A second installer should support the opposite end to maintain even alignment.



8 Insert the Supplied Bolts

Insert the supplied bolts upward from underneath through the aligned holes. Start each fastener by hand and leave it slightly loose for adjustment.

INSTALLATION NOTE

Start every fastener before fully tightening any single mounting point.

FINAL TIGHTENING AND CLEARANCE

Steps 9 - 10



9 Tighten All Mounting Points

Check that the side skirt is straight, then tighten the fasteners evenly from the center toward both ends. Keep the part flush with the vehicle sill.

INSTALLATION NOTE

Do not overtighten. Follow the specified torque if the product provides one.



10 Check Clearance and Jacking Points

Confirm the side skirt is secure, gap spacing is even, and every factory jacking point remains fully accessible.

INSTALLATION NOTE

The installed part must not obstruct lifting points or contact the tires.

FINAL INSPECTION



FINAL CHECKLIST

- Both extensions are installed on the correct side and in the correct orientation.
- The side skirts sit straight and flush against the vehicle sills.
- Gap spacing remains even from the front to the rear.
- All supplied fasteners are installed and secure.
- The tape is fully pressed with no visibly lifted edges.
- Factory jacking points remain clear and fully accessible.

IMPORTANT

This guide is based on the supplied installation video. Follow the product-specific hardware instructions and the vehicle manufacturer's workshop information. Recheck all fasteners after the first drive and at regular intervals. Professional installation is recommended.